

# Features & Benefits



**BERM CONDITIONER** - Designed to firm the soil after compaction layers have been broken up by the Sub-Soiler shanks.




**AUTO RESET WITH 19 mm SPRING STEEL SHANK** - Our exclusive 254 mm no-till point minimizes soil disturbance while creating maximum fracture below the surface.



**SHEAR BOLT WITH 32 mm STRAIGHT SHANK** - Available with either 51 mm or 178 mm points. Will not only fracture under the surface, but will create more surface disturbance.

## Sub-Soiler

Auto reset spring features 1 361 kg load capacity (also available as shear bolt configuration)

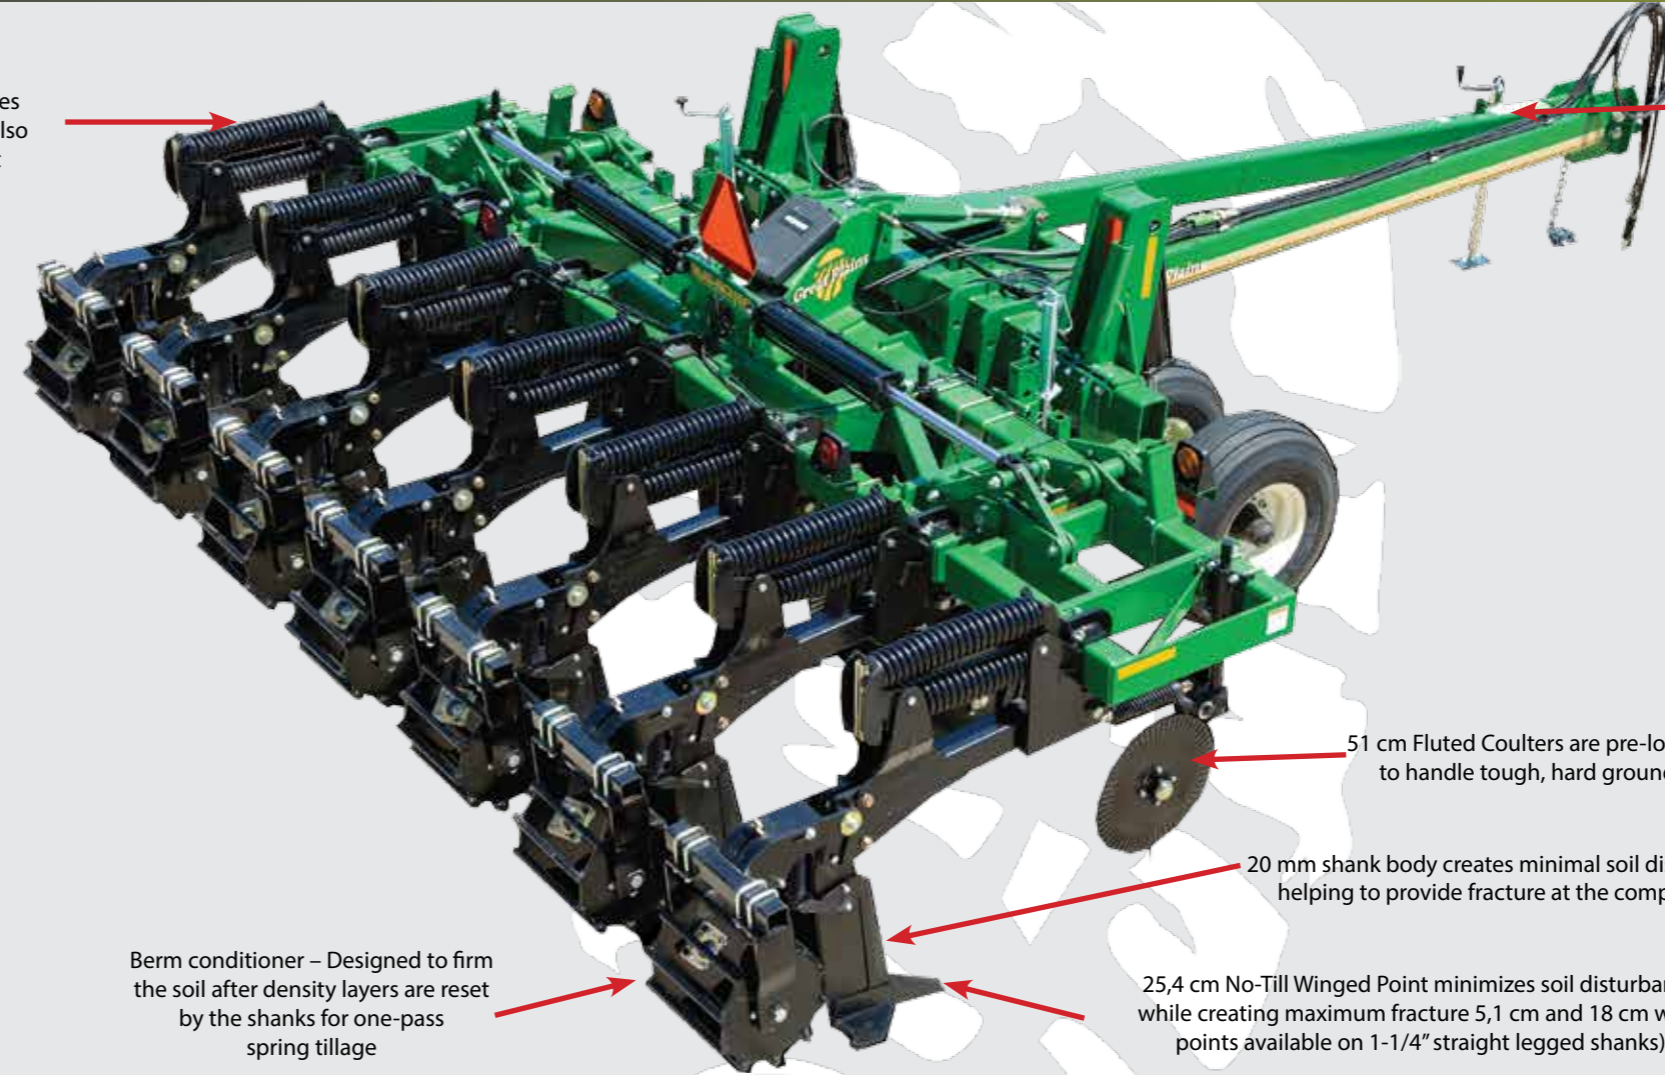

Available with standard 3-point mount as well as optional SSH hitch (shown)

51 cm Fluted Coulters are pre-loaded to 204 kg to handle tough, hard ground conditions

20 mm shank body creates minimal soil disturbance while helping to provide fracture at the compaction point

Berm conditioner - Designed to firm the soil after density layers are reset by the shanks for one-pass spring tillage

25,4 cm No-Till Winged Point minimizes soil disturbance while creating maximum fracture 5,1 cm and 18 cm wide points available on 1-1/4" straight legged shanks)

MODEL INFO	Sub-Soiler: Deep vertical tillage			
MODELS	SS1300	SS1700	SS1800	SS2000
SHANK SPACING	61 / 76 / 91 / 97 / 102 cm			
TYRES	20,5x8 10-ply			
WEIGHT*	3 shanks 1 438 kg	7 shanks 2 499 kg	6 shanks 2 200 kg	8 shanks 2 880
PTO KW REQ	38+ per shank			
DIMENSIONS				
TILLAGE WIDTH	4,9 m	5,5 m	6 m	7,6 m
WIDTH (transport)	3,6 m	4,3 - 6 m	4 m	4,7 m



### Meer oor die Sub-Soiler

Die Inline Sub-Soiler is ontwerp om verdigtingslae wat horisontalebewerkingstoerusting soos ploëë, skottels en ander smeewerktuie veroorsaak uit te skakel sonder om die oppervlakreste te versteur.

Daar is twee soorte skagte beskikbaar: Die geenbewerkingsskag van 19 mm met sy geenbewerkingpunt bied die maksimum grondopbreking met minimum oppervlakversteuring. Vir meer oppervlakversteuring, kies die reguit skag van 32 mm.



Contact us for more information: 086 111 3692

Marius Tolmay ▶ 083-581-5709 ▶ info@agriafrika.co.za  
 Mauritz Maree ▶ 071-148-3664 ▶ Delmas  
 Johan Roestof ▶ 079-526-1381 ▶ Delmas / Noordwes  
 Wessel Pretorius ▶ 072-370-8389 ▶ Bethlehem

Leonard Kennedy ▶ 082-388-1966 ▶ Kaap  
 Gerrie Wagenaar ▶ 083-627-7260 ▶ Hoopstad  
 Technical ▶ Rudolph Marx ▶ 071-682-8018  
 Technical ▶ Louis Smit ▶ 076-851-3360

